VS. SLALOM™*

Nintendo®

Live The Thrill.

VS. SLALOM™*

Step Up To The Challenge.

Nintendo takes you to the top of the mountain in this exciting new entry to the VS. System™** of fast-action, high-earning games.

But one look at the VS. Slalom cabinet tells you this is no ordinary video game. That's because players actually stand on skis mounted to a teeterboard base and hold on to ski poles inserted through the control panel.

Together, these realistic ski features control a player's directional movement, jumps, quick turns and speed.

And just as you'd expect from Nintendo, all this realism—all this player appeal—can be yours without a lot of headaches. Conversion is fast with dramatic results. The additional ski base and pole hardware required for VS. Slalom can be attached to your existing VS. System cabinets in less than 30 minutes—right on location.

That's all it takes to get your players up and running on an obstacle-filled course against time.

And just to help bolster the competitive spirit, VS. Slalom offers 21 high-score records to challenge players on its 24 exhilarating runs.

VS. Slalom—one of the hottest contenders for video profits ever to come out of the starting gate.

Contact your Authorized Nintendo Distributor or call Nintendo of America Inc., (206) 882-2040, for more information.

Ski Base Attachment
Dimensions: 24" (W)×24" (D)
Weight: 30 lbs.

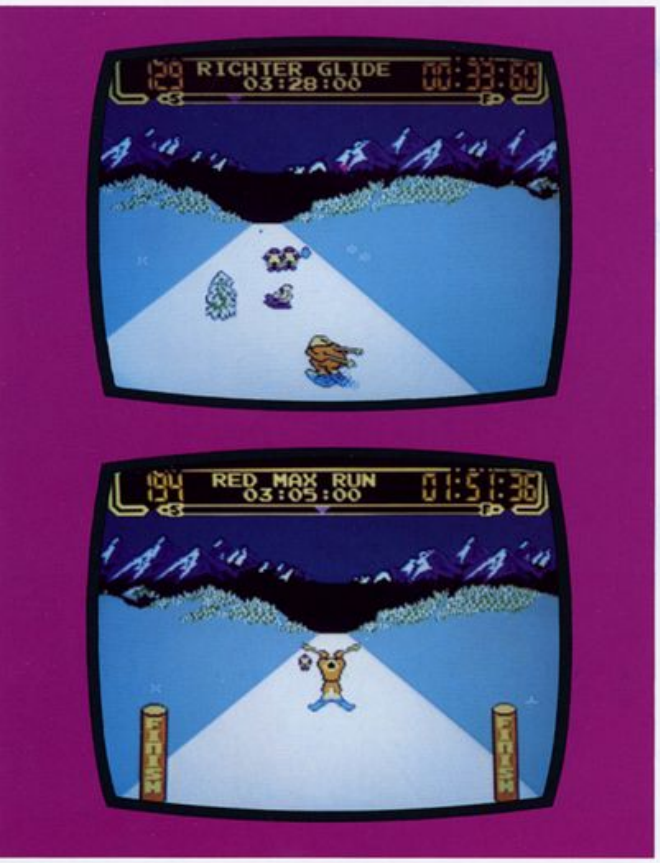

Nintendo®

**Available in Dedicated or VS.-Pak® form for the VS. DualSystem™ and VS. UniSystem®. Or, to put new life into your old games, get the VS. UniKit™ to convert Donkey Kong,® Donkey Kong Jr.,® Popeye,[1] Donkey Kong 3,® Mario Bros.,® (narrow cabinet only), Pac-Man[2] and Ms. Pac-Man.[2]

[1]©King Features Syndicate, Inc.
[2]™of Bally Midway Manufacturing Inc.

★ ©1986 Rare, Ltd.
Licensed exclusively to Nintendo of America Inc.
™of Nintendo of America Inc.

©1986 Nintendo of America Inc.
Printed in U.S.A.

Nintendo of America Inc.
P.O. Box 957, Redmond, WA 98052
(206) 882-2040

VS. SLALOM™

(Operation Manual) MDS(MGS)

1. How to install Software ROMs

Each Software ROM is labeled with a Location Number shown on it (▨ Shaded Portion illustrated below), which indicates the corresponding location on the P.C. Board where it should be installed.

(Label on Software ROM)

"VS. SLALOM™" contains 5 Software ROMs, and 1 Custom IC, which have location numbers, 1A or 6A, 1B or 6B, 1C or 6C, 1D or 6D, 2B or 8B and 2F or 8F. Each ROM and IC must be mounted into the proper IC Socket.

For VS.DUAL SYSTEM (two monitors): If "VS. SLALOM" is to be installed in main (left) side of cabinet, then EPROMs and Custom IC should use locations 1A, 1B, 1C, 1D, 2B and 2F. For sub (right) side, use locations 6A, 6B, 6C, 6D, 8B and 8F.

For VS.UNISYSTEM (one monitor): "VS. SLALOM" EPROMs and Custom IC must use locations 6A, 6B, 6C, 6D, 8B and 8F (sub side).

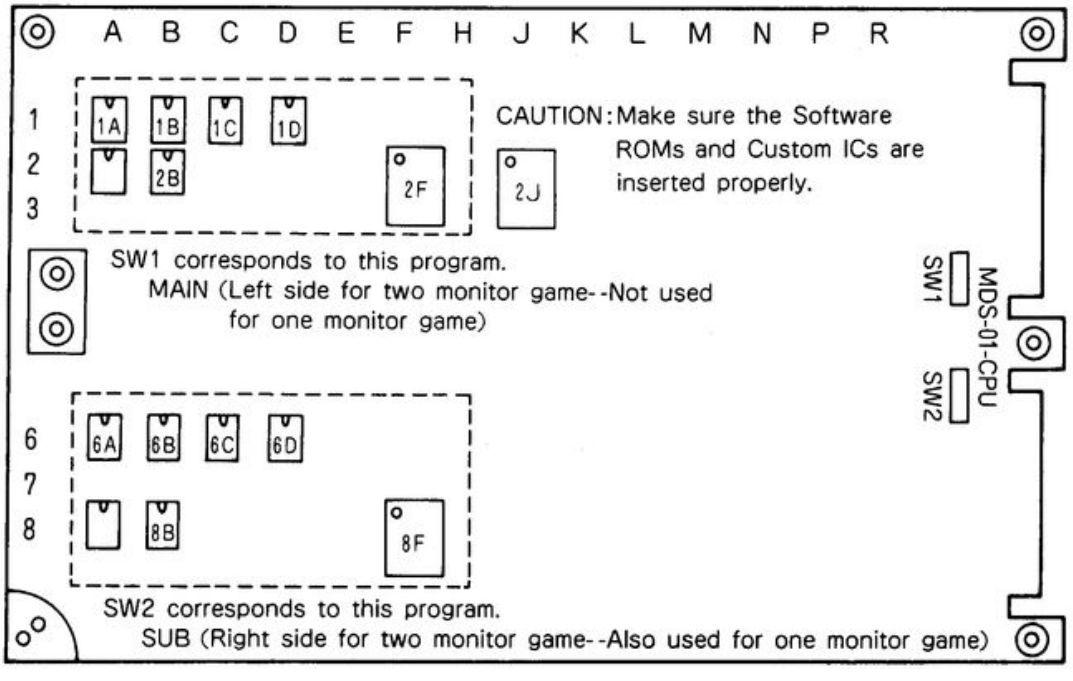

ROM and IC Location on P.C. Board

NOTE: "VS. SLALOM" can be interchanged between left and right side on two monitor game.

2. Points and methods of adjustment

Game Option Settings
MDS P.C. Board

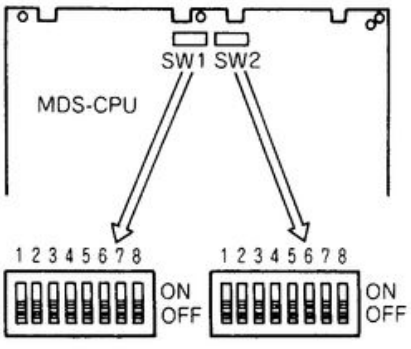

SW1···MAIN (Left side for two monitor game — Not used for one monitor game)

SW2···SUB (Right side for two monitor game — Also used for one monitor game)

MDS FOR VS. SLALOM

		SW1 (SW2)								
		1	2	3	4	5	6	7	8	
Coin/Credit	1/1	OFF	OFF	OFF						*
	1/2	OFF	OFF	ON						
	1/3	OFF	ON	OFF						
	2/1	OFF	ON	ON						
	3/1	ON	OFF	OFF						
	4/1	ON	OFF	ON						
	5/1	ON	ON	OFF						
Free Play		ON	ON	ON						
Freestyle Points	Left/Right				OFF					*
	Hold Time				ON					
Difficulty	Easy 1					OFF	OFF			
	Normal 2					ON	OFF			*
	Medium 3					OFF	ON			
	Hard 4					ON	ON			
Continue	**Yes**							OFF		*
	No							ON		
Not Used - Must Be Set to "OFF"									OFF	*

*Factory Suggested Settings

Nintendo®

Back Door Adjustment Label

Game Option Settings

MDS P.C. Board

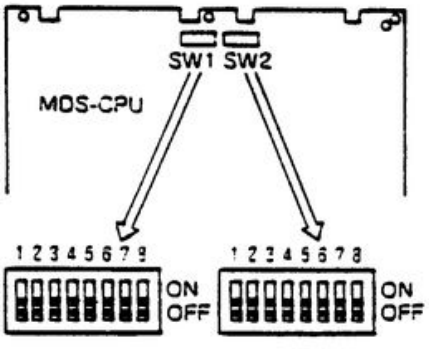

SW1···MAIN (Left side for two monitor game — Not used for one monitor game)

SW2···SUB (Right side for two monitor game — Also used for one monitor game)

MDS FOR VS. SLALOM

		SW1 (SW2)								
		1	2	3	4	5	6	7	8	
Coin/Credit	1/1	OFF	OFF	OFF						*
	1/2	OFF	OFF	ON						
	1/3	OFF	ON	OFF						
	2/1	OFF	ON	ON						
	3/1	ON	OFF	OFF						
	4/1	ON	OFF	ON						
	5/1	ON	ON	OFF						
Free Play		ON	ON	ON						
Freestyle Points	Left/Right				OFF					*
	Hold Time				ON					
Difficulty	Easy 1					OFF	OFF			
	Normal 2					ON	OFF			*
	Medium 3					OFF	ON			
	Hard 4					ON	ON			
Continue	Yes							OFF		*
	No							ON		
Not Used - Must Be Set to "OFF"									OFF	*

*Factory Suggested Settings

Nintendo®

CHECK YOUR DIP SWITCH SETTINGS!!

TO MAXIMIZE YOUR EARNINGS USE FACTORY SUGGESTED SETTING

FACTORY SUGGESTED SETTING VS. **SLALOM™**
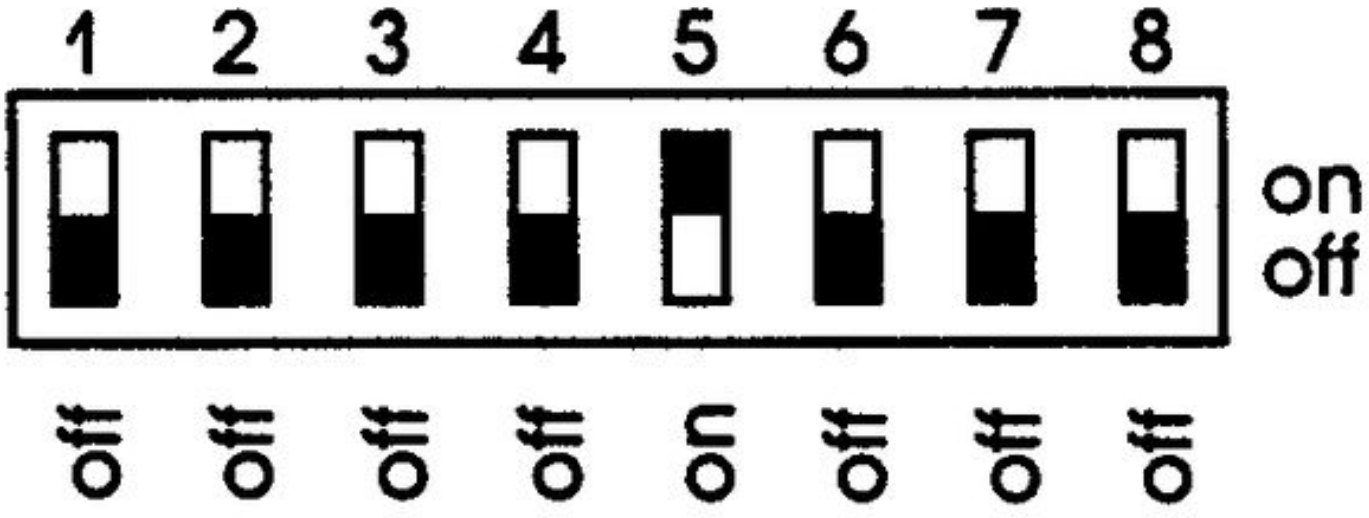
SW1 or SW2